







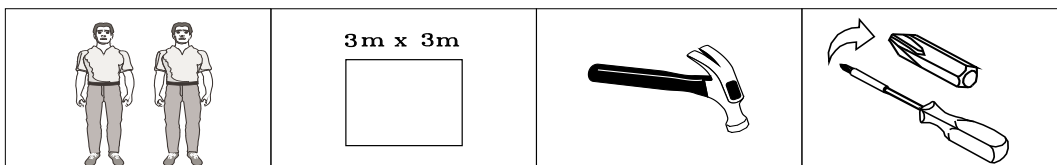

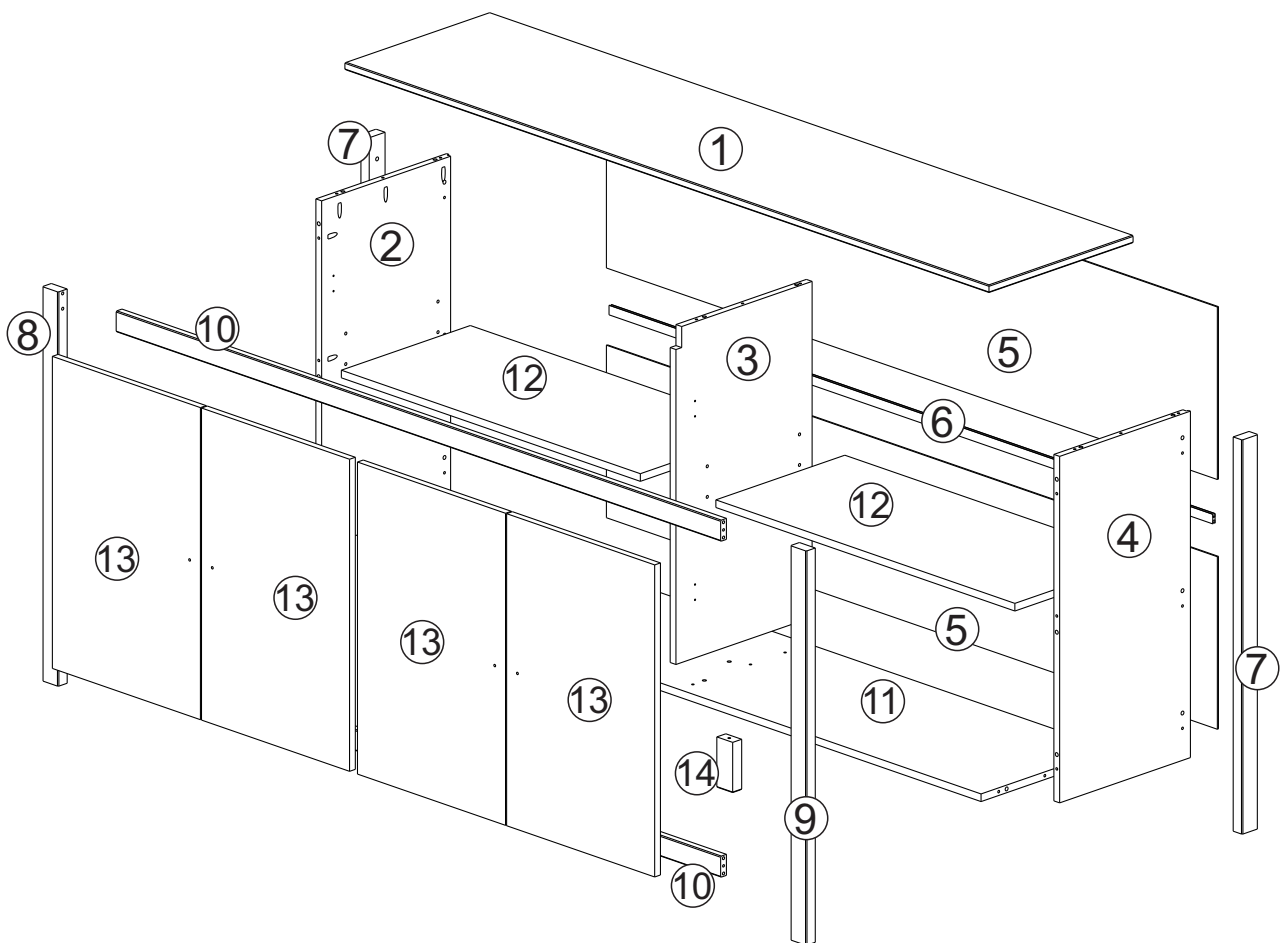

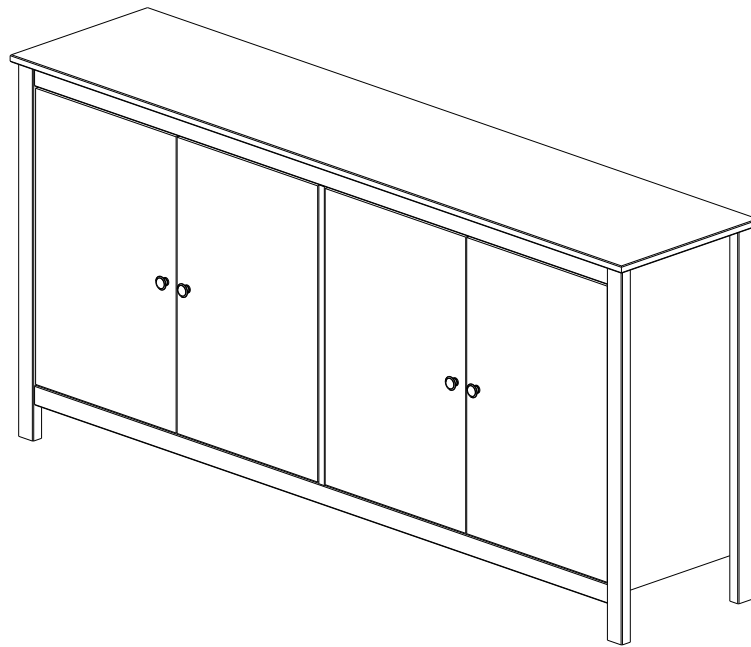




BALCÃO 4 PORTAS





Ferragens




A		8x25	24
B		3,5x30	70
C		3,5x14	32
D			08
E			04
F			08

G		10x10	44
H		PUXADOR	04
I		6x30	08
J		3,5x25	04
K		7x50	01
L			01


1)

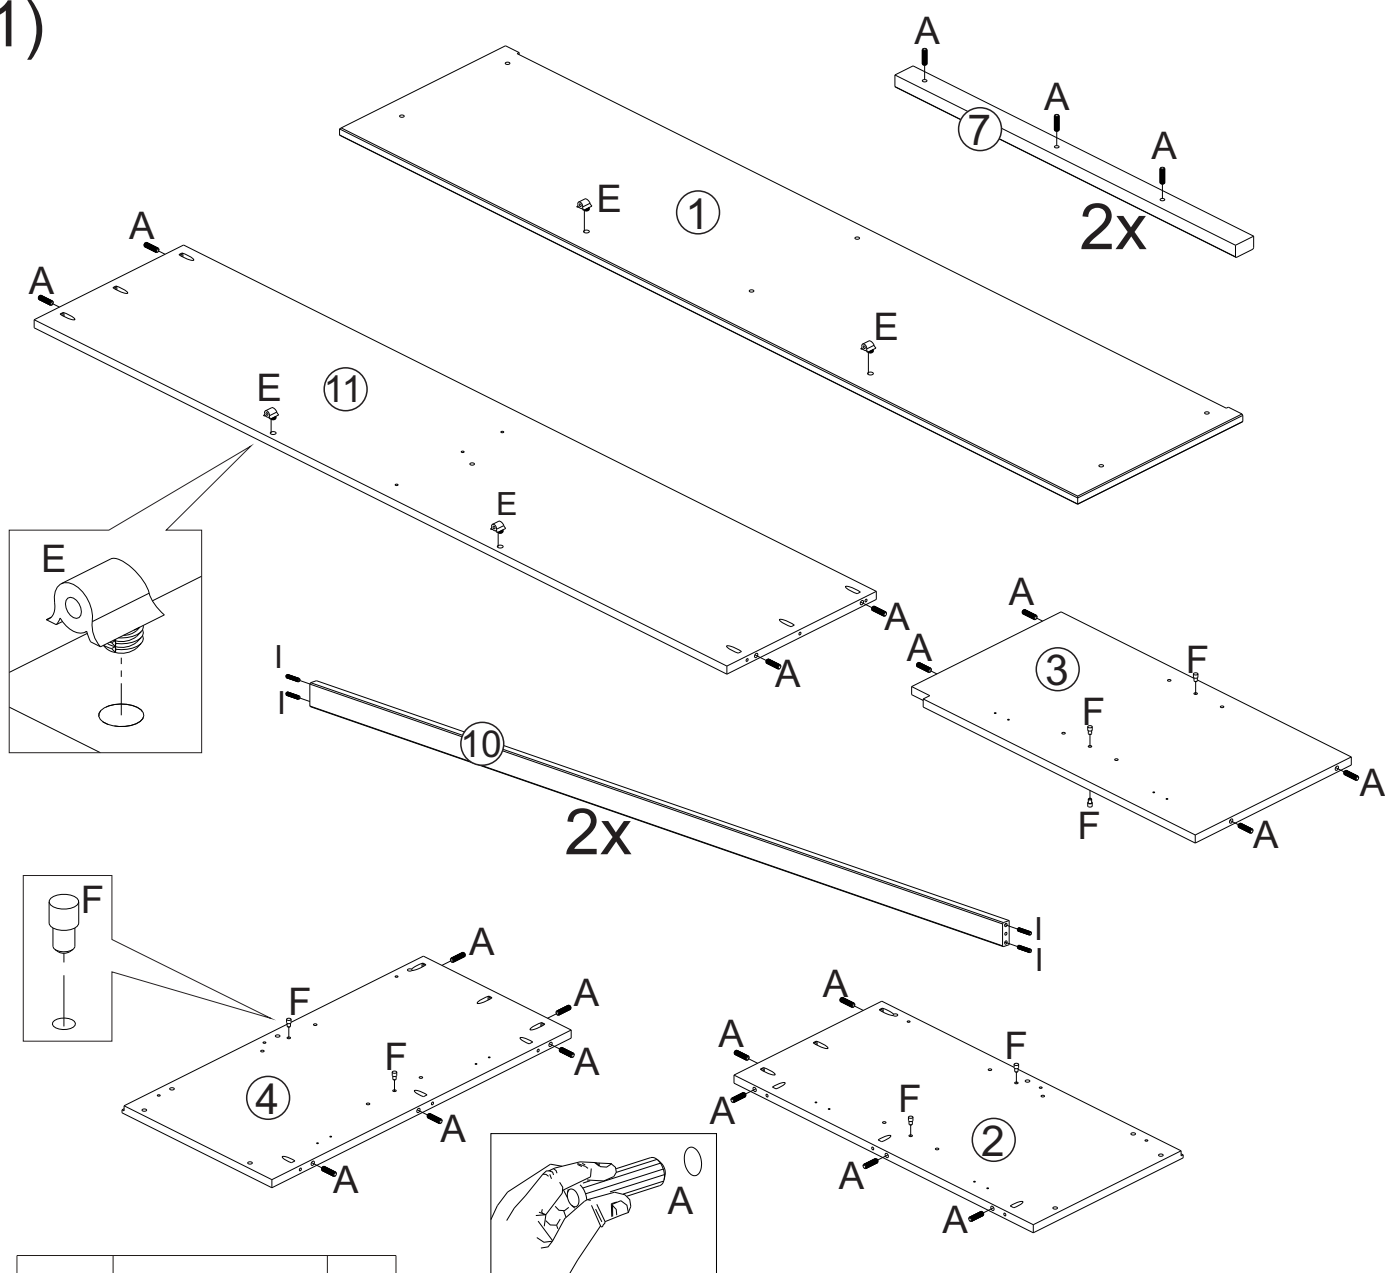


A		8x25	24
---	---	------	----

E		04	F		08	I		6x30	08
---	---	----	---	---	----	---	---	------	----


2)

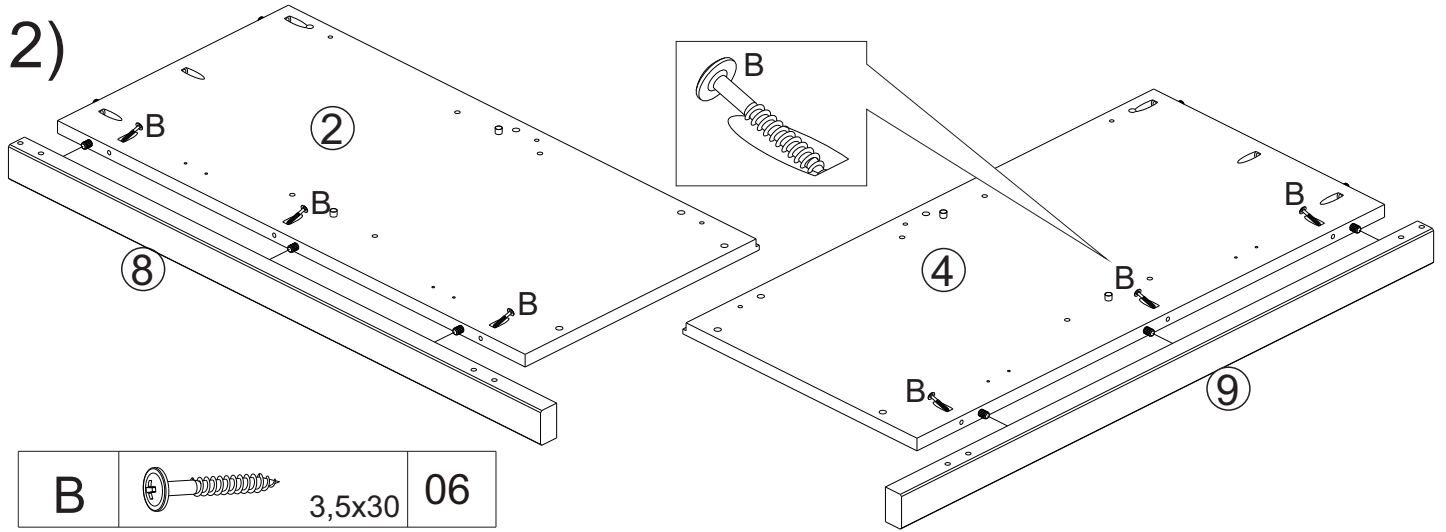


3)


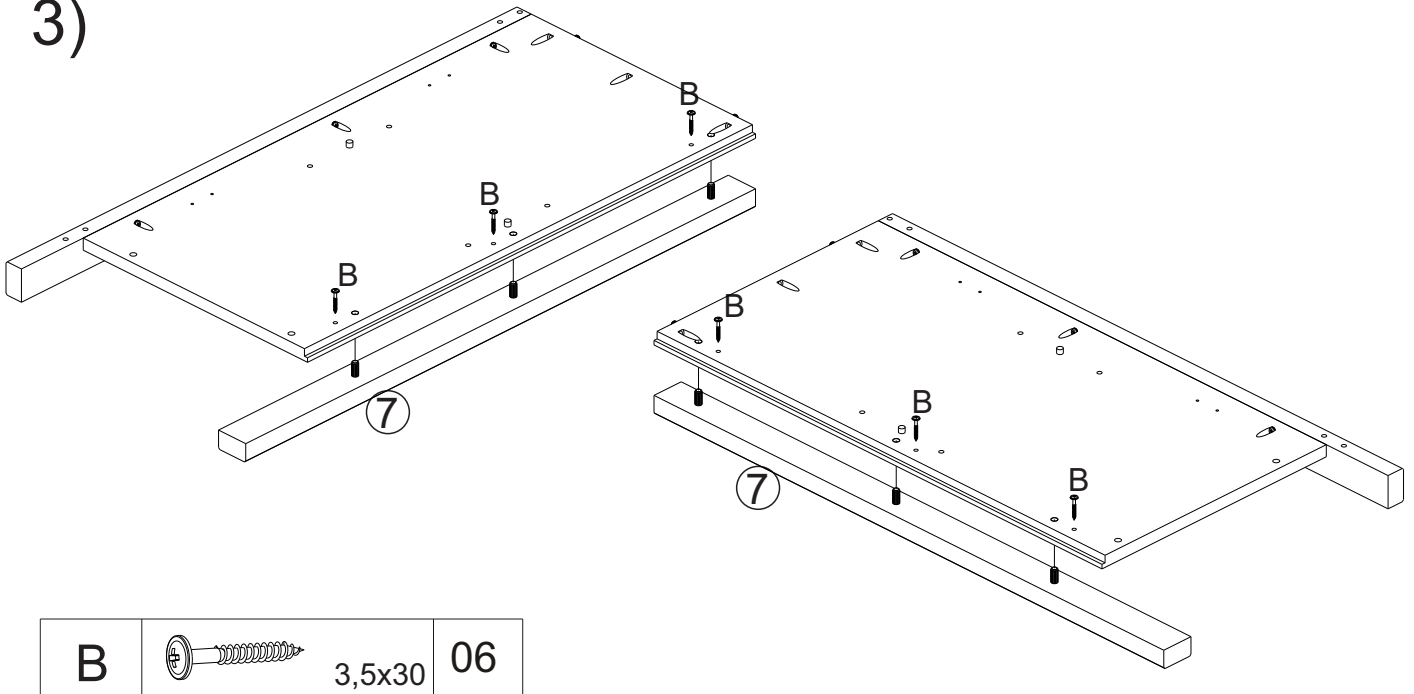


4)

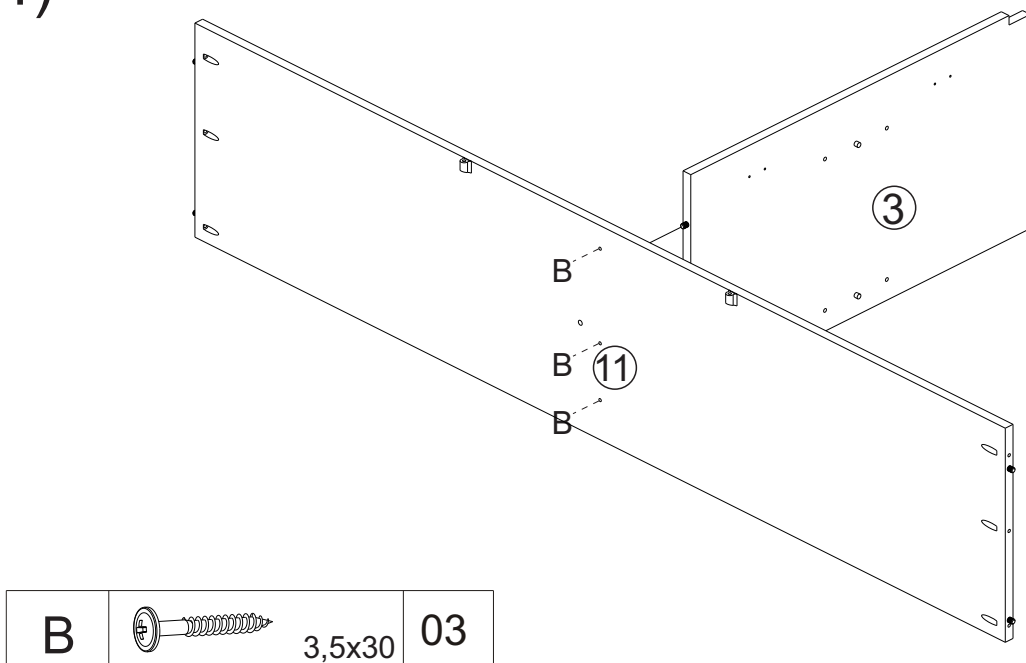



5)

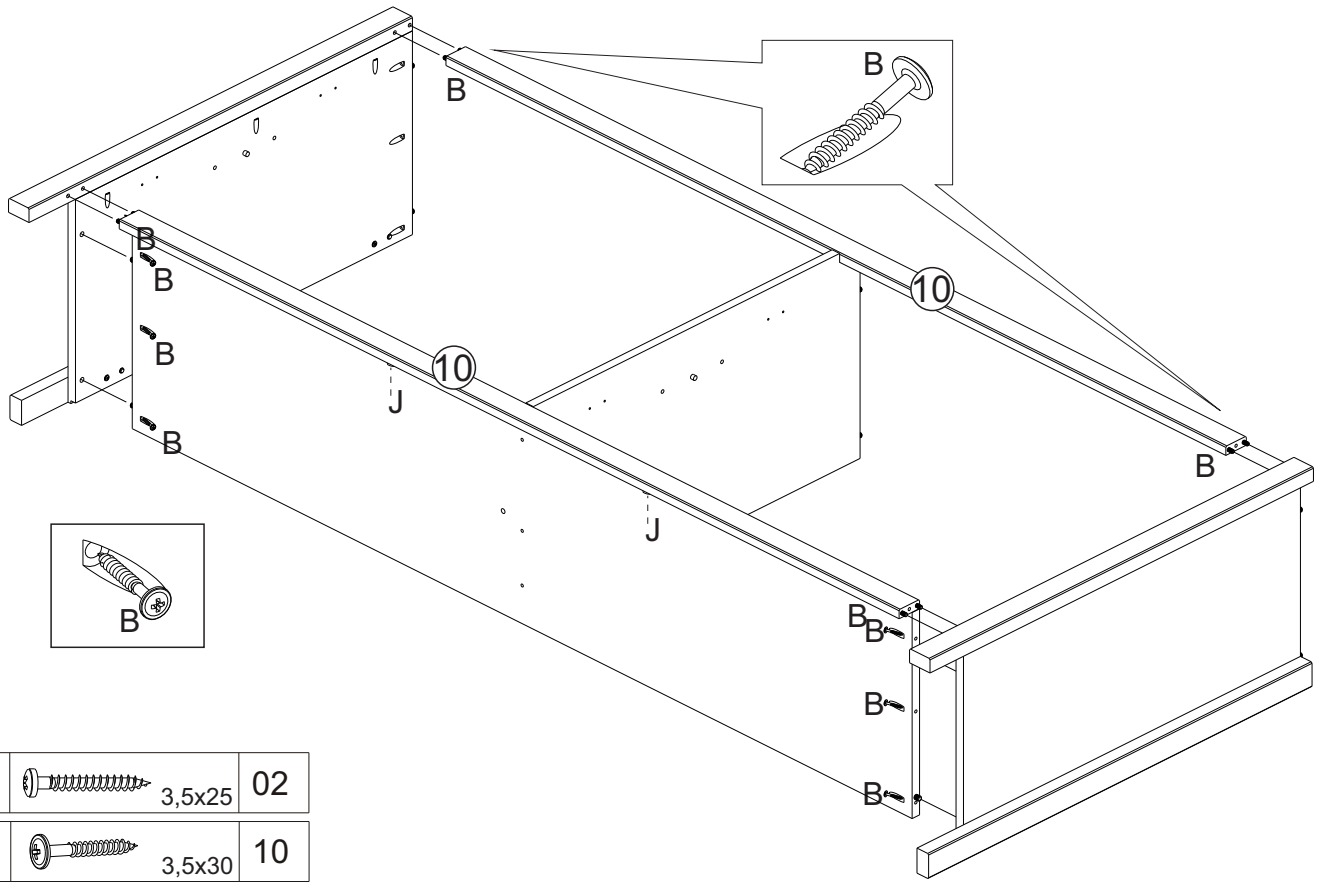



J		3,5x25	02
B		3,5x30	10

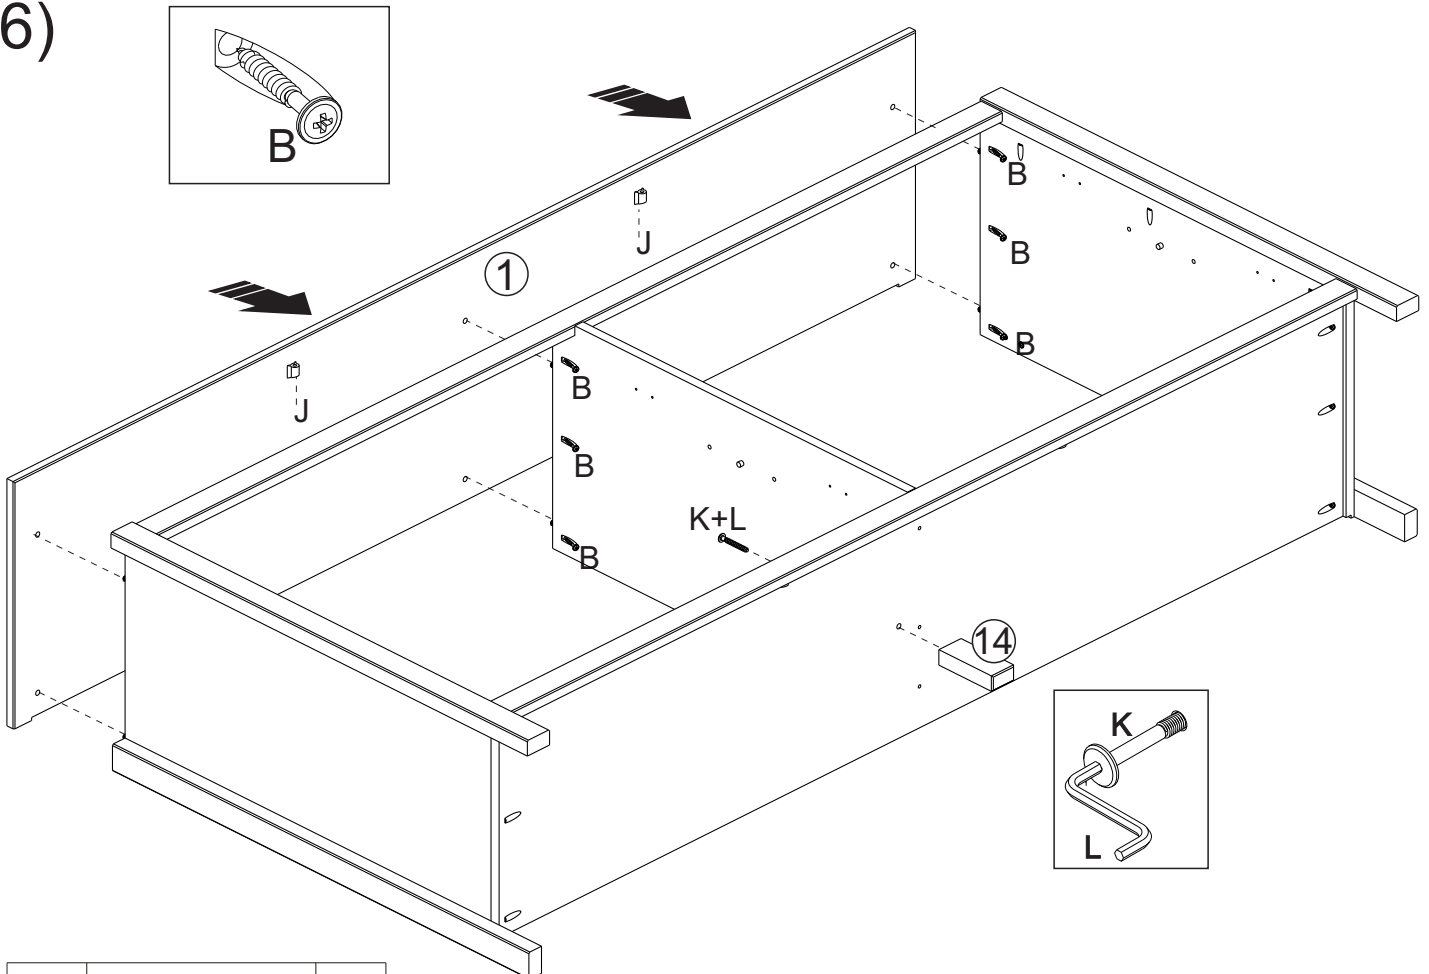
6)




J		3,5x25	02
---	---	--------	----

B		3,5x30	09
---	---	--------	----


K		7x50	01
---	---	------	----


L			01
---	--	--	----

7)

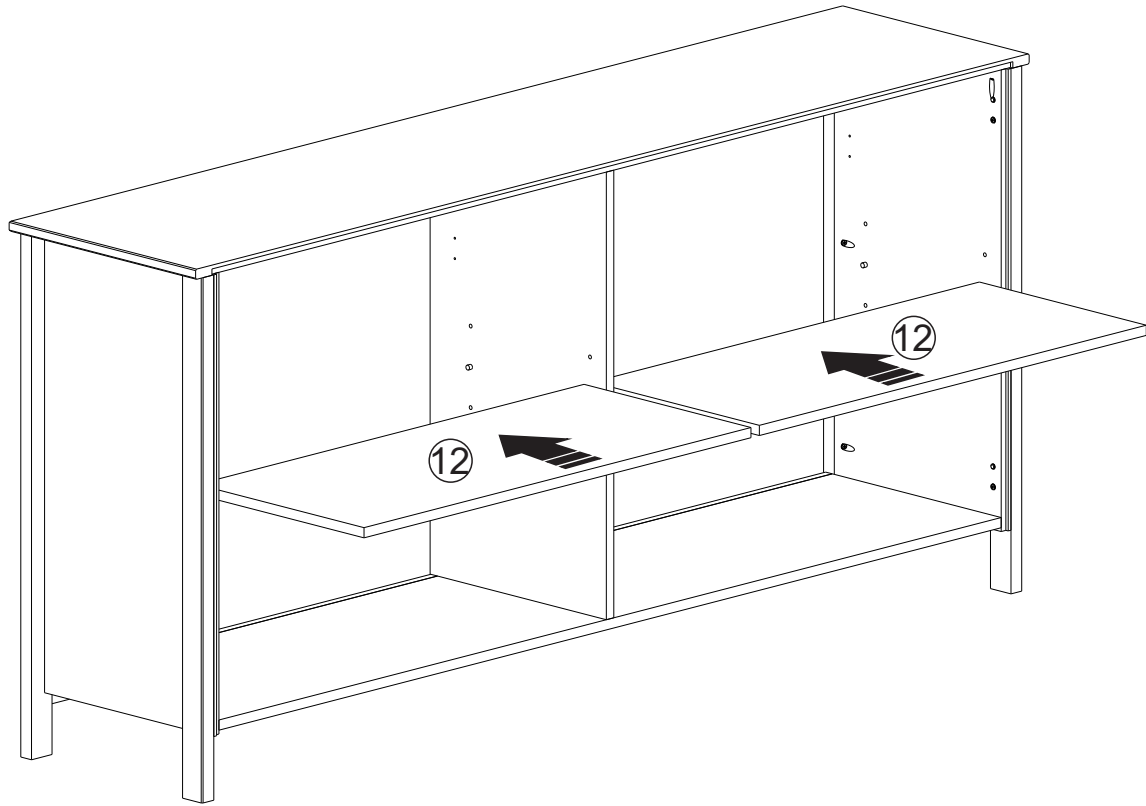


8)

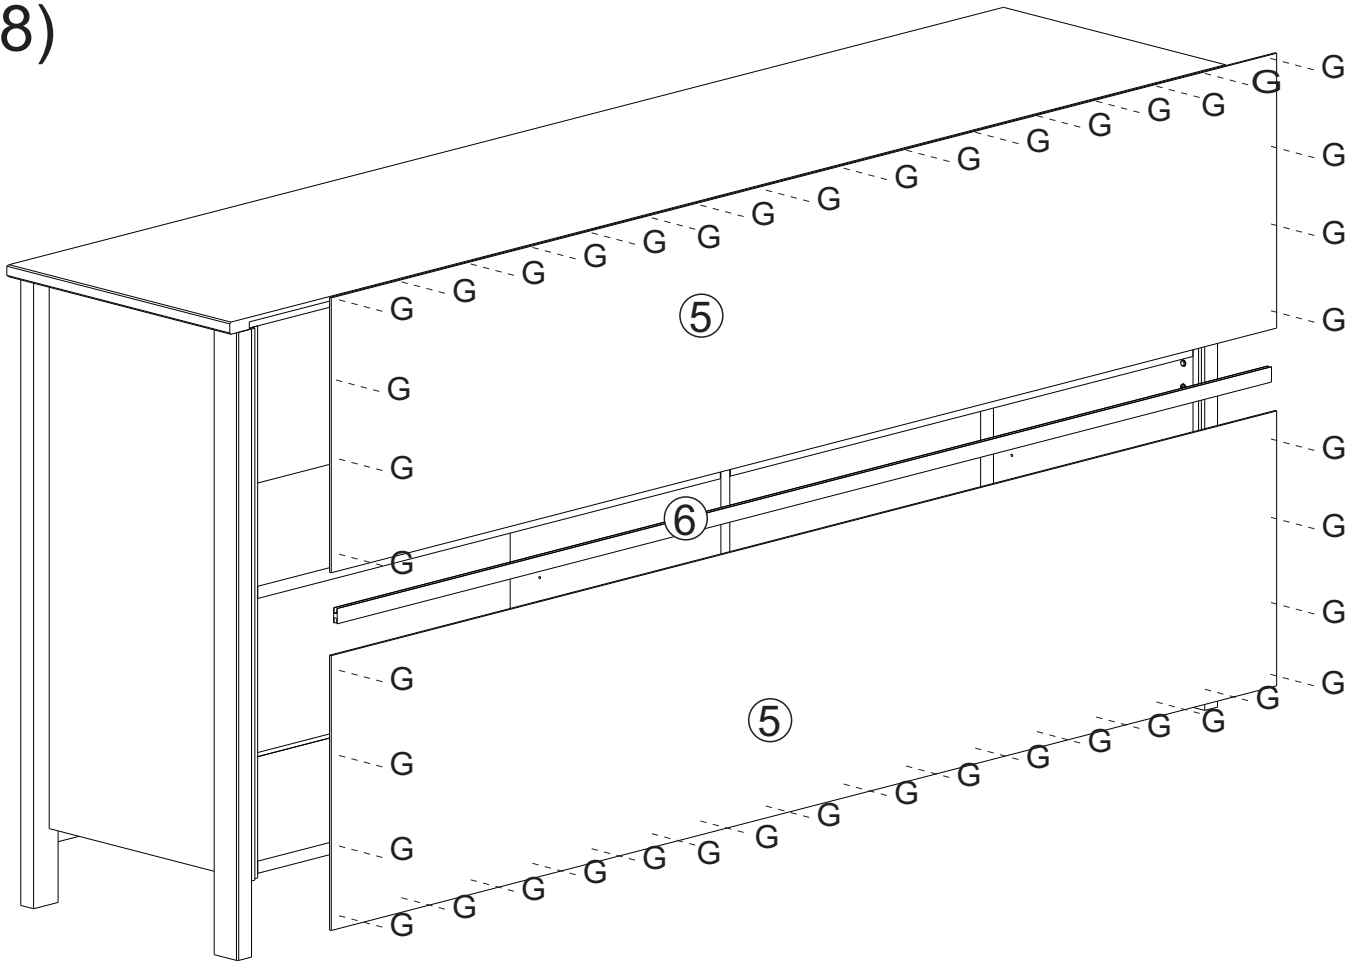



G	 10x10	44
---	--	----


9)

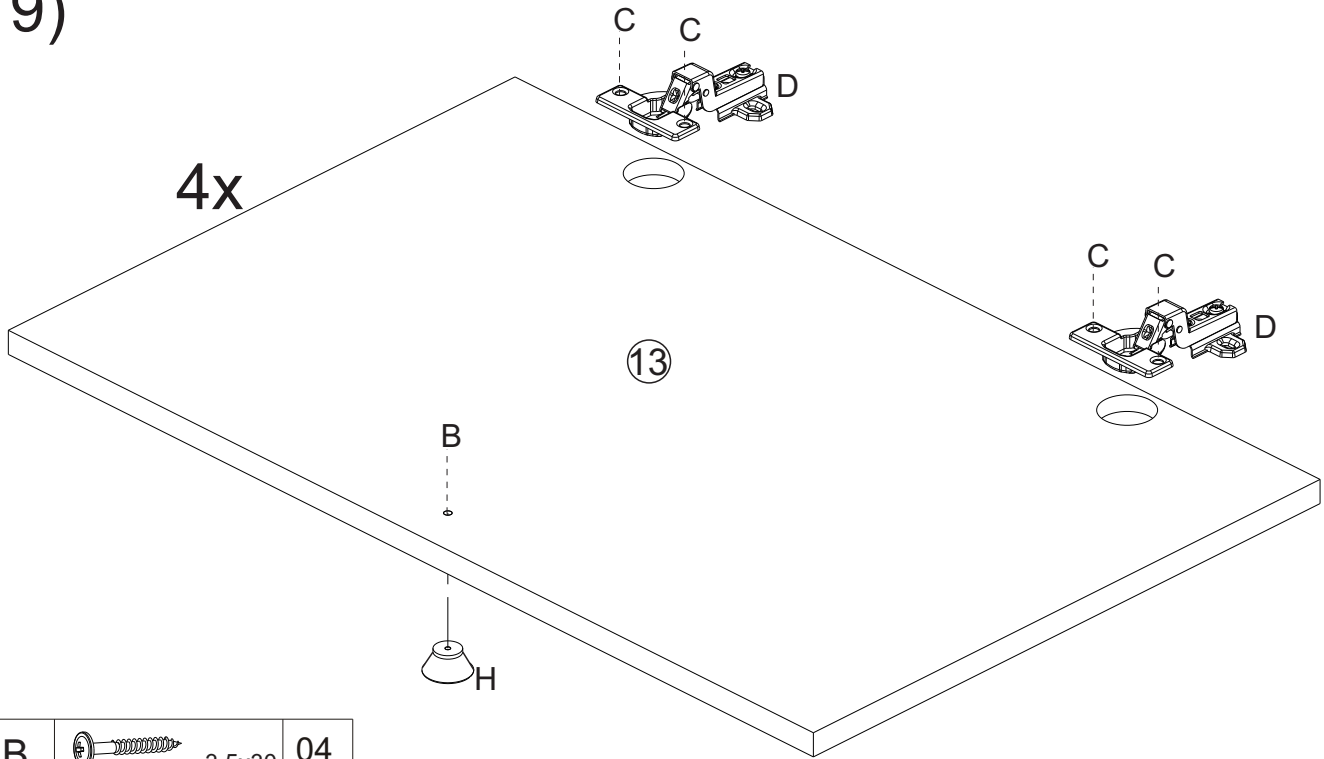


B		3,5x30	04
---	---	--------	----

H		04
---	---	----

C		3,5x14	16
---	---	--------	----

D		08
---	---	----

10)

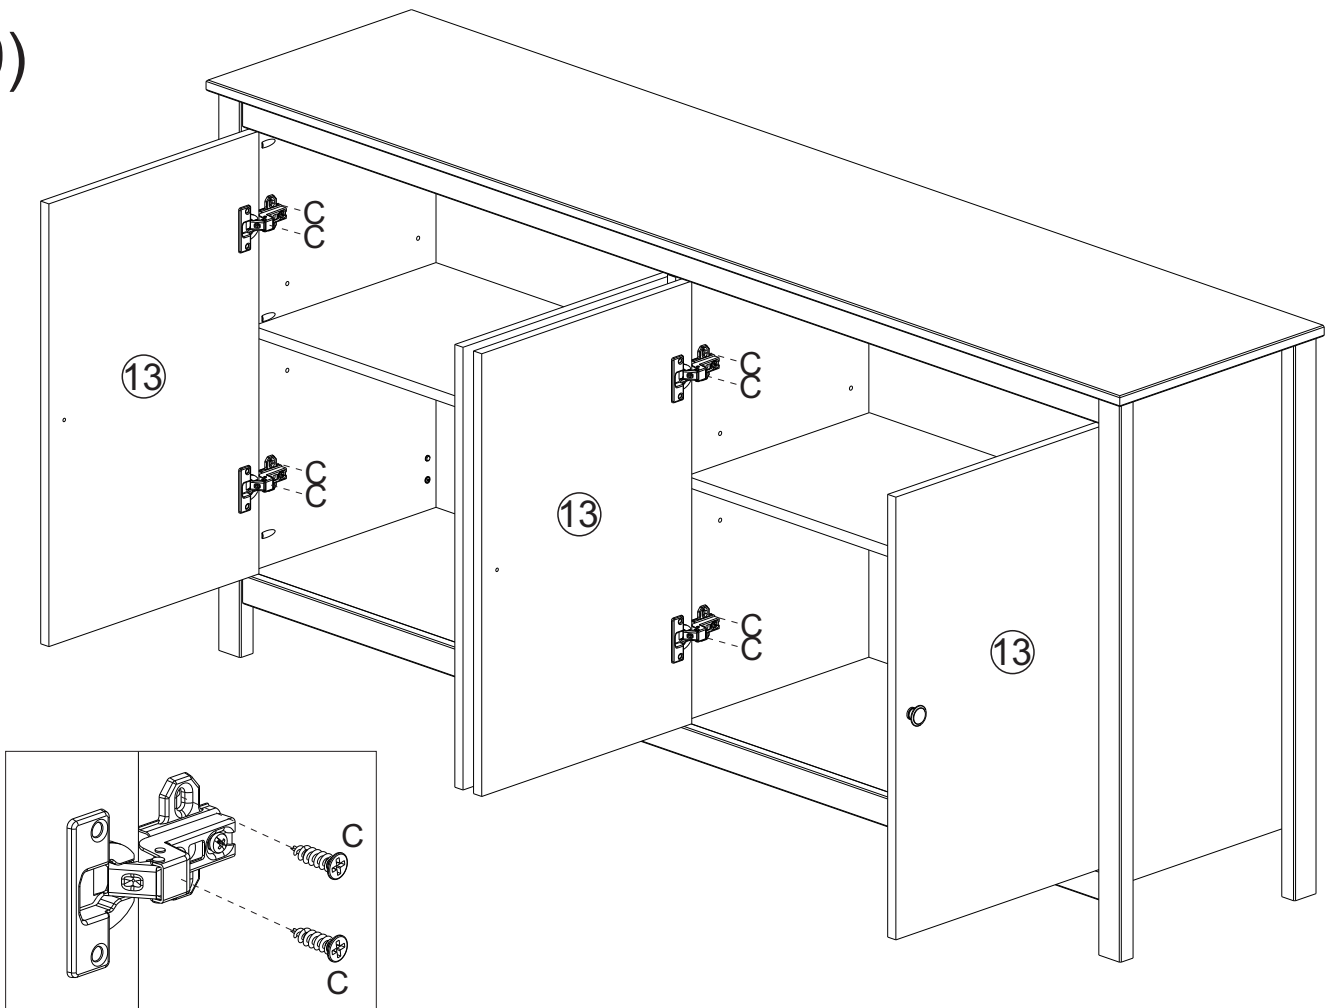

C		3,5x14	16
---	---	--------	----

Depois de Montado Fixar o Reforço nas Portas

